



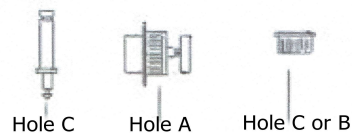

## Prokraft PKR BBB

### Prokraft Button Catch Fitting Guide

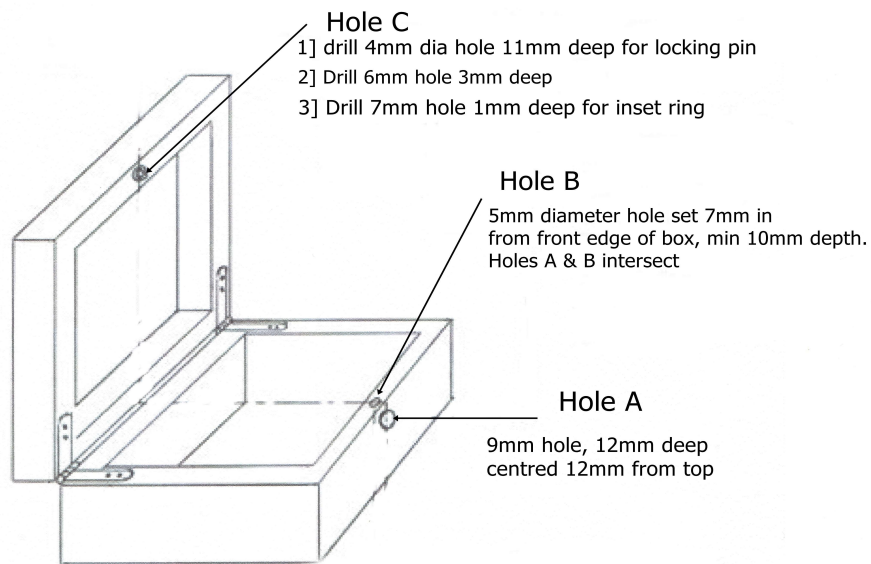

For best results use a drill press. Min wall thickness 12.5mm  
The Inset ring may be used on either holes B or C, for fitting to hole B follow steps 2 & 3 marked on Hole C.  
Always fit and align box hinges before fitting catch.  
Fit main button in hole A first, the locking pin can be located by locking into the main button and gently pressing the lid to make a fitting mark (depending on wood hardness).  
These are fitting guides only and some minor adjustment may be needed for a final quality fit.