




PKR LET 2 & 3 Premium Letter Opener Assembly Instructions

The parts diagram below shows the parts of a Prokraft Premium Letter Opener Kit in the order they need to be assembled. Please read these assembly instructions fully before attempting assembly.

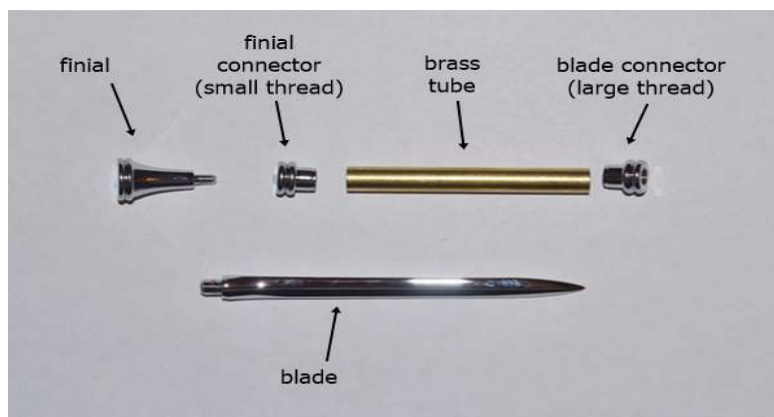

1] The finial and finial connector come assembled in a small pack – unscrew the 2 parts and separate.

2] Fit the finial connector and blade connector to the finished tube using a suitable press or vice. This can be done in any order. Both parts are flat on the ends for ease of assembly.

3] screw the finial into the finial connector – this can be glued for a permanent fit

4] Screw the blade into the blade connector – this can also be glued if required

Your kit is now finished and ready for use